 


ACCESSORY SOCKET

 
<CRF300L/CRF300LA>

ACCESSORY SOCKET

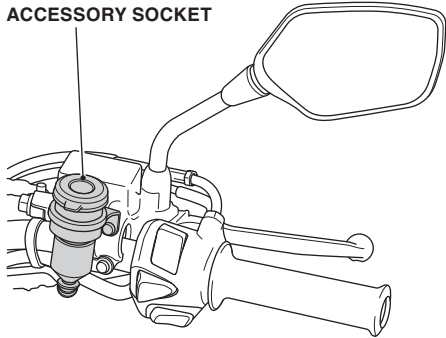

<CRF300LR/CRF300LRA>

ACCESSORY SOCKET

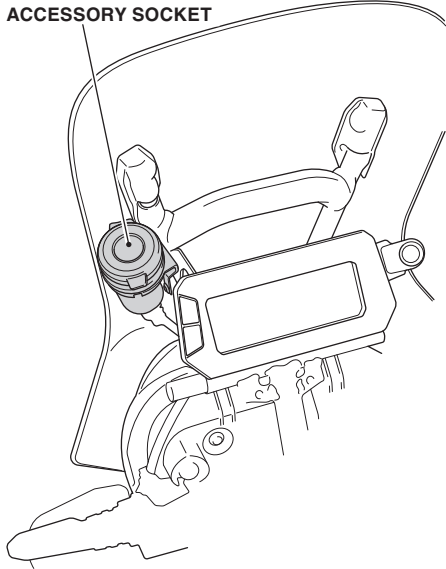


• The maximum power rating of connected accessories is following:

08E70-K1T-J50:	36W (12V, 3A)
08E70-KZZ-D21:	12W (12V, 1A)
08E70-KZZ-J20:	36W (12V, 3A)

- Use accessories with engine running to avoid discharging the battery.
- Do not use a cigarette lighter, as this can cause a malfunction.
- Cover the socket with the cap when the accessory socket is not used to prevent entry of foreign objects.
- Carefully secure any connected devices, as vibrations may cause them to shift unexpectedly.
- Do not use the accessory socket when the motorcycle is being washed.
- Check the accessory mounts frequently and retighten if necessary.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

 CARRIER BRACKET

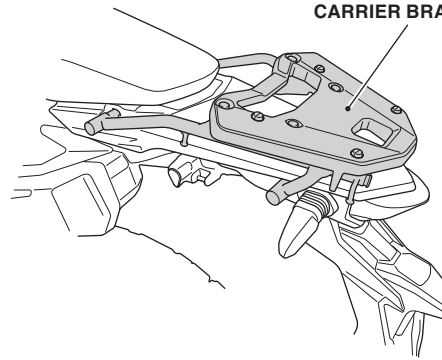

CARRIER BRACKET

 
• The weight of the cargo must not exceed the following maximum loading capacity:
Only use carrier bracket: 5.0 kg (11.0 lb)

- Check the accessory mounts frequently and retighten if necessary.
- Clean this accessory with a soft cloth soaked with solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

CRF300L/CRF300LA/CRF300LR/CRF300LRA

Genuine Accessory User's Guide


TOP BOX (MJP)

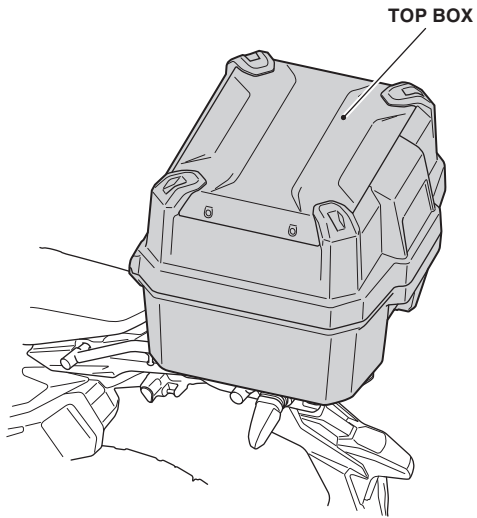

⚠ CAUTION
To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- The weight of the cargo must not exceed the following maximum loading capacity:
Cargo weight in top box: 3.0 kg (6.6 lb)

 
- Do not store valuables or easily breakable items in the top box.
- Don't place a heavy object on the opened lid or apply an excessive force from the top of opened lid.
- Be sure that the top box is installed securely before riding.
- The top box is not perfectly watertight, and water may enter when washing the motorcycle, or when it rains.
- Check the accessory mounts frequently.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

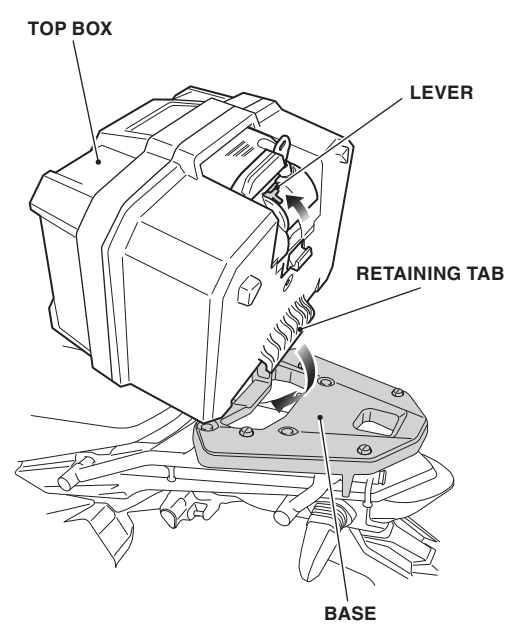


HOW TO INSTALL THE TOP BOX

NOTE:

 
- The key must be turned clockwise before installing the top box.

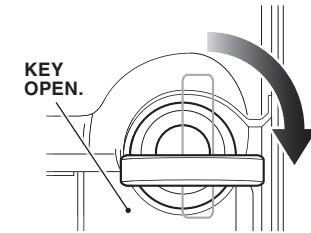

 1. Insert the retaining tabs of the top box into the base with the lever in the raised position as shown.

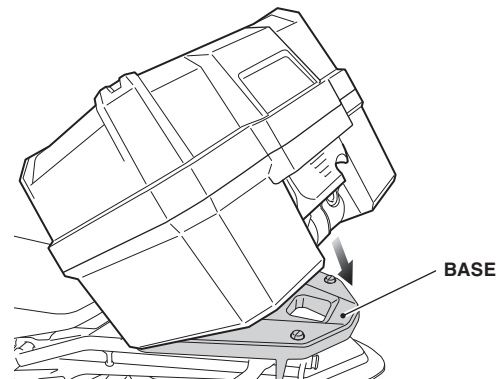

 
2. Position the hook of the lock assembly on the base as shown.
3. Secure the hook by pressing the lever down as shown.

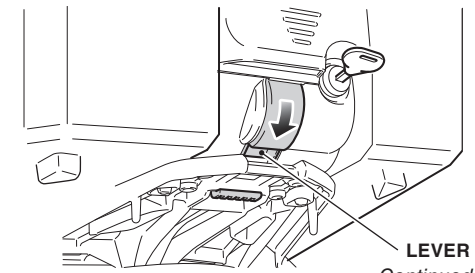


LEVER
Continued

CRF300L/CRF300LA/CRF300LR/CRF300LRA

 Genuine Accessory User's Guide

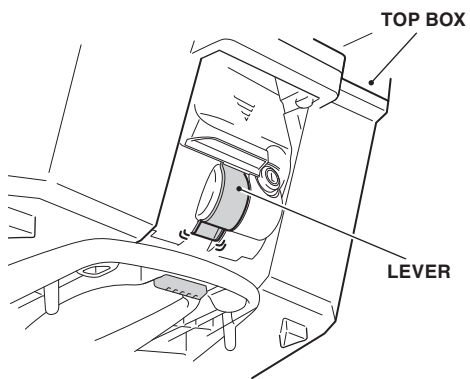


 4. Lock the top box by turning the key as shown.

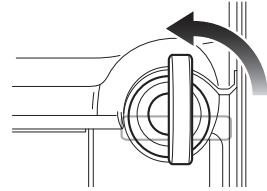

5. Remove the key. Be sure that lid and hook cannot be released and the top box is installed securely.

 - The top box can come off while riding if it is not mounted securely.

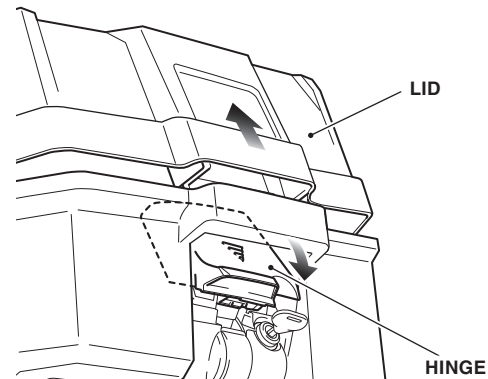



3. Raising the upper part of hinge, move the hinge down as shown and open the lid.

HOW TO REMOVE THE TOP BOX


1. Remove the top box in the reverse order of installation.

HOW TO CLOSE THE TOP BOX

  1. Confirm that the key position is as shown.

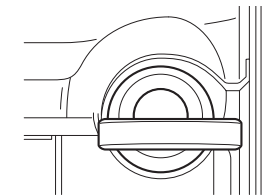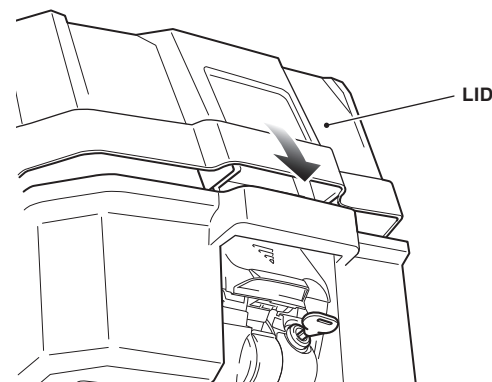


 2. Close the lid.

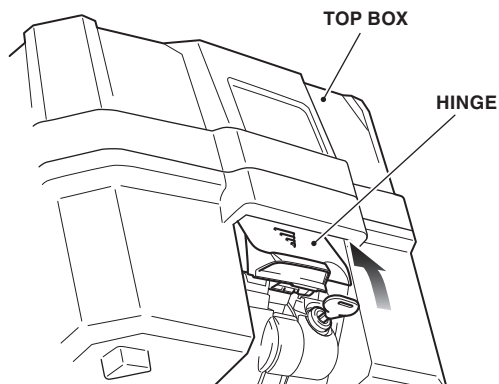


HOW TO OPEN THE TOP BOX

 1. Insert the key and release the lock by turning the key as shown.

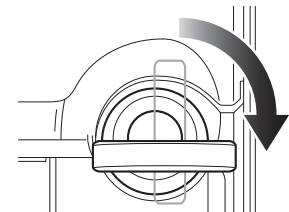

 
2. Pull the hinge up as shown.

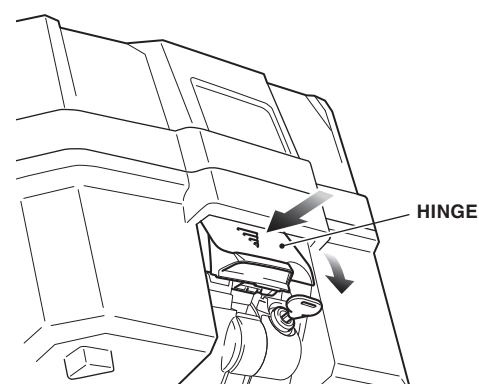

3. Holding the upper part of the hinge, push the hinge down.

4. Lock the top box by turning the key as shown.

 - Be careful not to have the stored item pinched when the top box is closed.

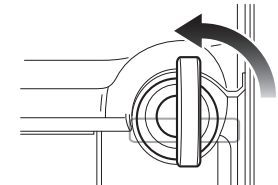


5. Remove the key.

- Make sure the lid is locked down securely.

CRF300L/CRF300LA/CRF300LR/CRF300LRA


Genuine Accessory User's Guide

 REAR CARRIER BASE

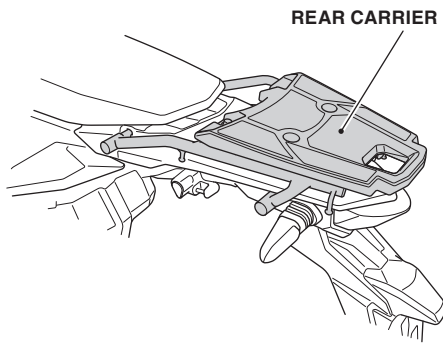

- REAR CARRIER BASE**
- The weight of the cargo must not exceed the following maximum loading capacity:
Only use rear carrier base: 5.0 kg (11.0 lb)
 - Check the accessory mounts frequently and retighten if necessary.
 - Clean this accessory with a soft cloth soaked with solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

 TOP BOX

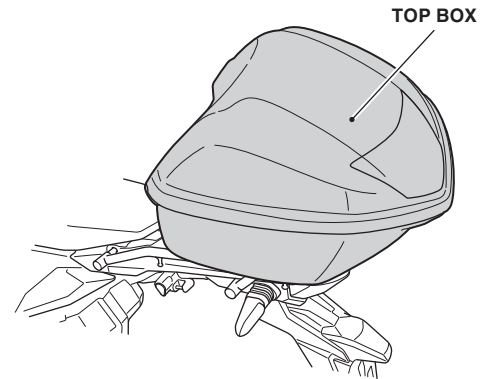

⚠ CAUTION

 
To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- The weight of the cargo must not exceed the following maximum loading capacity:
Cargo weight in top box: 3.0 kg (6.6 lb)

- Do not store valuables or easily breakable items in the top box.
- Don't place a heavy object on the opened lid or apply an excessive force from the top of opened lid.
- Be sure that the top box is installed securely before riding.
- The top box is not perfectly watertight, and water may enter when washing the motorcycle, or when it rains.
- Check the accessory mounts frequently.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.

CRF300L/CRF300LA/CRF300LR/CRF300LRA


Genuine Accessory User's Guide

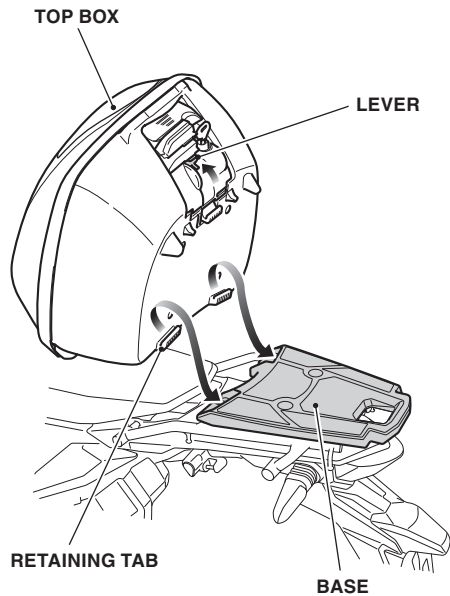


HOW TO INSTALL THE TOP BOX

NOTE:

 
- The key must be turned clockwise before installing the top box.

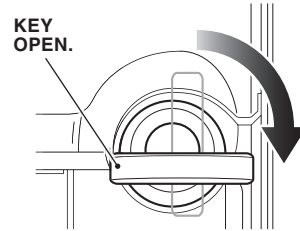

 1. Insert the retaining tabs of the top box into the base with the lever in the raised position as shown.

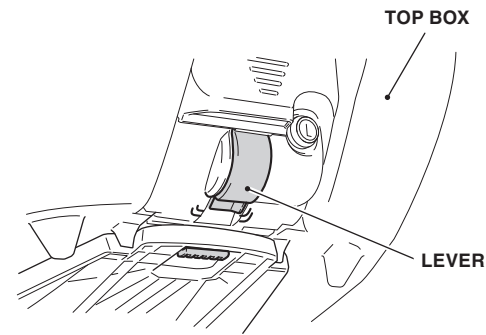

 
4. Lock the top box by turning the key as shown.

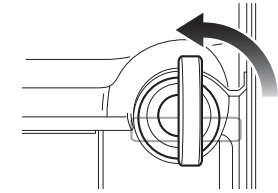



5. Remove the key. Be sure that lid and hook cannot be released and the top box is installed securely.
 - The top box can come off while riding if it is not mounted securely.

HOW TO REMOVE THE TOP BOX

 1. Remove the top box in the reverse order of installation.

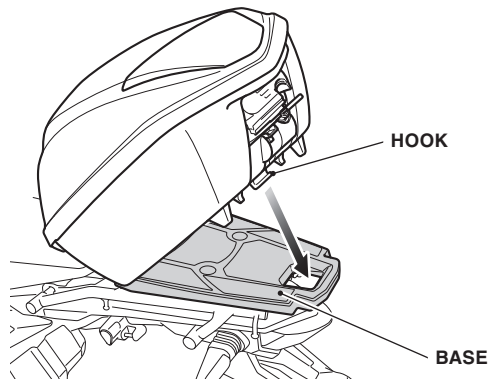


  2. Position the hook of the lock assembly on the base as shown.
3. Secure the hook by pressing the lever down as shown.

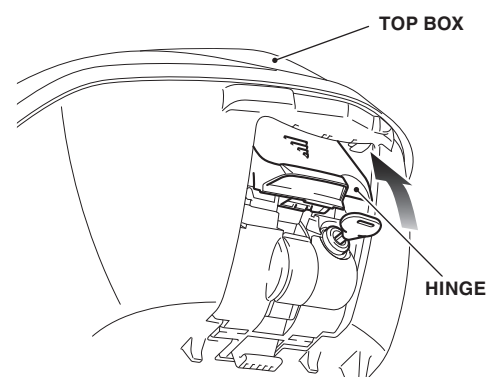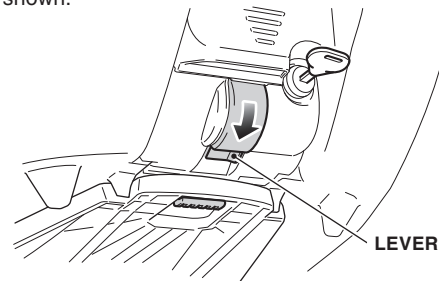

HOW TO OPEN THE TOP BOX

 1. Insert the key and release the lock by turning the key as shown.

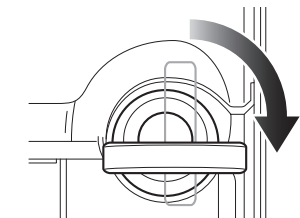


2. Pull the hinge up as shown.


Continued

CRF300L/CRF300LA/CRF300LR/CRF300LRA

 Genuine Accessory User's Guide

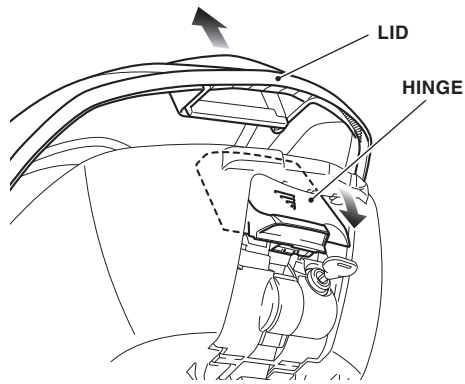


 - Rising the upper part of hinge, move the hinge down as shown and open the lid.

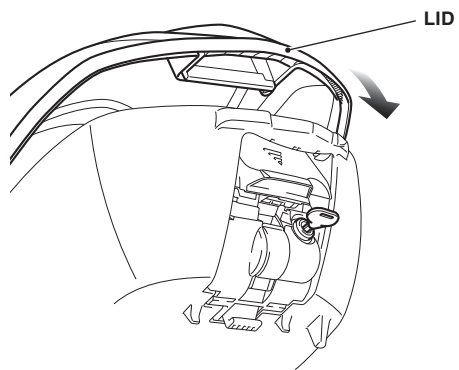


HOW TO CLOSE THE TOP BOX

 
- Confirm that the key position is as shown.

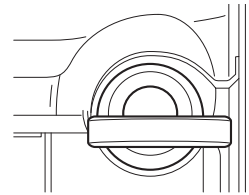

- Close the lid.

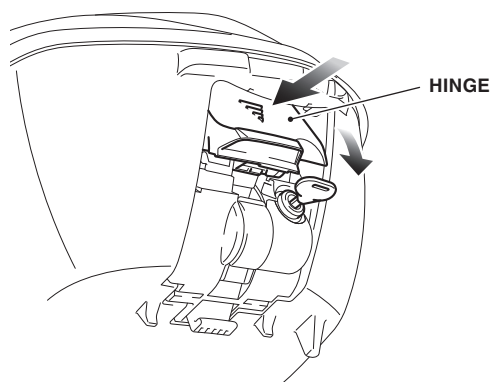 


 - Holding the upper part of the hinge, push the hinge down.
- Lock the top box by turning the key as shown.
 - Be careful not to have the stored item pinched when the top box is closed.

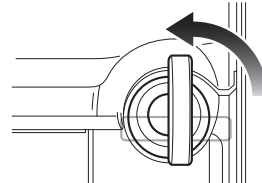

- Remove the key.
 - Make sure the lid is locked down securely.

 
KNUCKLE GUARD

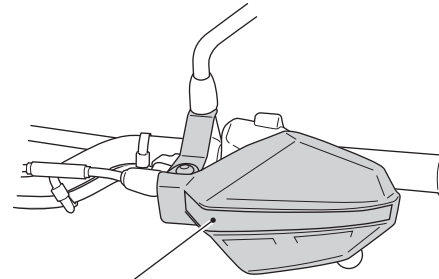

KNUCKLE GUARD

- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge. Do not use a brush to clean this accessory as it may scratch the surface.
- Never use organic solvents such as gasoline, thinner and benzene to clean this accessory. Also do not use acid or alkaline cleaners to clean this accessory. Wipe up spilled brake or battery fluid at once as they may damage the surface.
- Handle this accessory with care. It can be damaged when it is bent excessively or is subject to strong shock or impact.

 
SKID PLATE

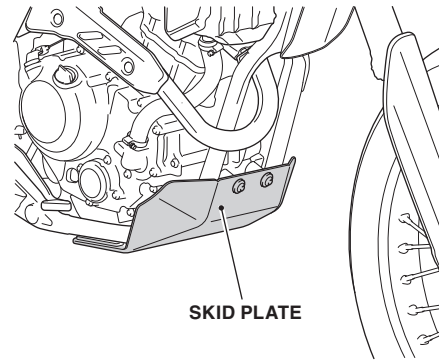

SKID PLATE

- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never use organic solvents such as gasoline, thinner and benzene to clean this accessory. Also do not use acid or alkaline cleaners to clean this accessory. Wipe up spilled brake or battery fluid at once as they may damage the surface.

 RALLY STEP

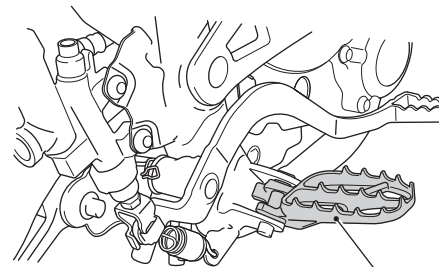


RALLY STEP

- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never use organic solvents such as gasoline, thinner and benzene to clean this accessory. Also do not use acid or alkaline cleaners to clean this accessory. Wipe up spilled brake or battery fluid at once as they may damage the surface.


CRF300L/CRF300LA/CRF300LR/CRF300LRA

Genuine Accessory User's Guide

 GRIP HEATER

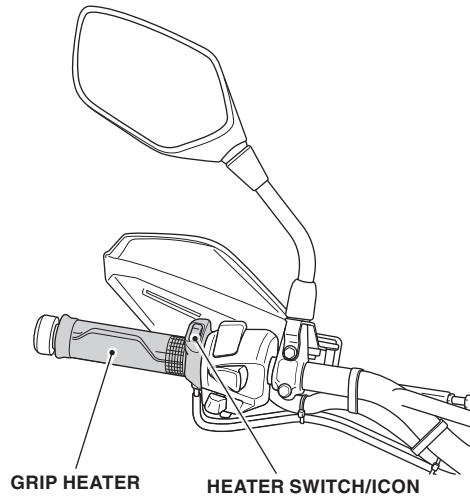


- This accessory is replaced with the grip heater combined with the throttle pipe. Therefore, the throttle operation has a different feeling after installation.
- Check the accessory mounts frequently.
- Clean this accessory with a soft cloth soaked with a solution of mild detergent and water. Then wipe with a clean cloth soaked with water to clean dirt and detergent. Finally wipe dry with a soft, clean cloth.
- Do not use the grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.
- Do not leave the grip heater in the high position for a long time on a warm day.
- The heater level is not changed if the ignition switch is turned to the OFF position within 5 seconds of changing the heater level.
- The selected heater level is indicated the number of times by the icon blinks.
- The selected heater level is indicated for a few seconds when the heater switch is operated.

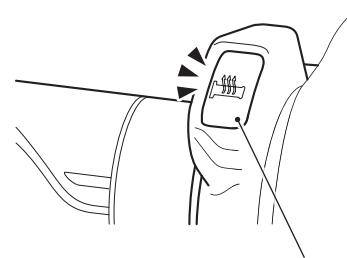 

HEATER SWITCH/ICON

GRIP HEATER INDICATOR

 - Indicates when the grip heater is operating.
- If the grip heater system has an error, the grip heater indicator will blink. If the blinking does not go off, see your Honda dealer as soon as possible.

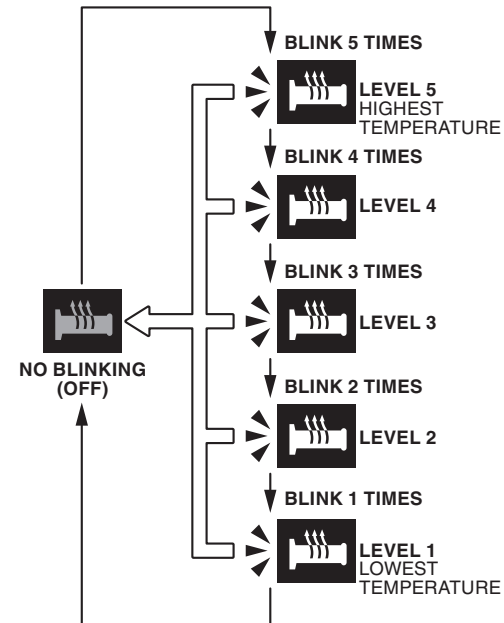

HOW TO USE THE GRIP HEATER

1. Start the engine.
2. Press the heater switch. The grip heater is ON.
3. Select the heater level by pressing the heater switch.
4. To turn OFF the heater, press the heater switch until the icon or grip heater indicator disappears.
 - Also, to turn off, push and hold the heater switch.

← Press the heater switch.

← Push and hold the heater switch.

Each level blinking repeat 7 times.

CRF300L/CRF300LA/CRF300LR/CRF300LRA

Genuine Accessory User's Guide

SAFETY INFORMATION

The following sentences show the label meaning.
Some labels warn you of potential hazards that could cause serious injury.
Others provide important safety information.
Read this information carefully and don't remove the label.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read the use and care information in installation instructions or genuine accessory user's guide carefully.
Read the **LOAD LIMITS AND GUIDELINES**, and **TYRES** sections in owner's manual.



WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION (with YELLOW background)

 
You **CAN** be **HURT** if you don't follow instructions.

Refer to this information for the meanings of the symbols shown on the accessory.

CARRIER WARNING LABEL



TOP BOX WARNING LABEL

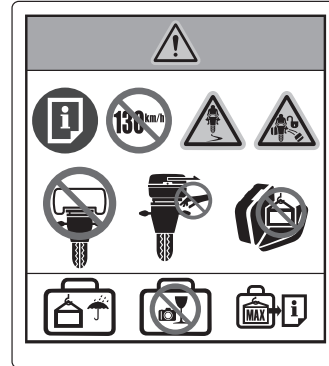

Never ride a motorcycle equipped with accessories and a cargo at speeds above 130 km/h (80 mph).



Added accessories and cargo can reduce a motorcycle's stability, performance and safe riding speed. A motorcycle's stability is influenced by an improper loading, worn or under-inflated tyres, the overall motorcycle condition and environmental conditions.



When driving with the motorcycle, all locks of all bags must be securely locked.

Panniers or top box may fall off if not locked properly to the carrier or stay.
Check for secure locking before riding.



When the carrier base is used as a rear carrier without mounting the top box, load the cargo on the carrier base in such a manner that the ability of the carrier base to slide is not impaired.



Do not insert your fingers or your hand into the bracket installation part at the bottom of the top box. Your fingers may get caught between top box and bracket.



Heavy cargo placed on the opened lid can damage the pannier or top box and the lid.



Entry of water is possible when the vehicle is washed etc.



Please be careful when placing important objects into the box. Also be careful with breakable and valuable items. Do not leave valuable items in the bags.



Regarding the maximum loading capacity. Read the use and care information carefully in each of the accessory installation instructions or genuine accessory user's guide.