



# INSTALLATION INSTRUCTIONS

Accessory

TANK BAG  
P/N OSH54-KRH-A00

Application

XR150L

Publication No.


MII 17935

Issue Date

April 2023

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

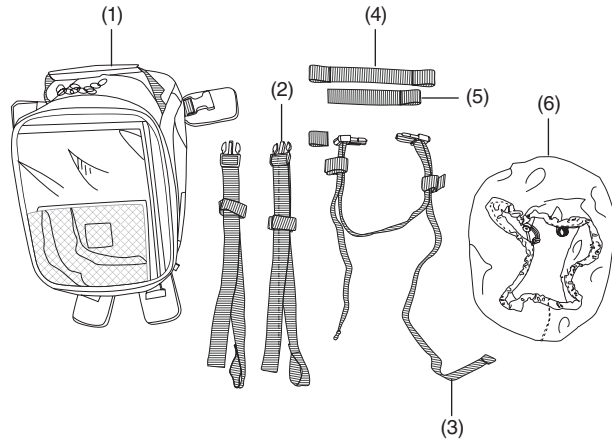

No.	Description	Qty.
(1)	Tank bag	1
(2)	Rear mount straps	2
(3)	Front mount strap	1
(4)	Long retention strap	1
(5)	Short retention strap	1
(6)	Rain cover (optional)	1

## USE AND CARE INFORMATION

- The weight of the cargo must not exceed 10 lbs.
- Clean the motorcycle before installing bags to avoid trapping dirt & dust between side covers and the saddle bags.
- Clean both sides of the contact area between the bag and the motorcycle frequently to avoid abrasions on the motorcycle body.
- Clean the bags with warm soapy water and a sponge or soft brush and let air dry. Do not use in a washing machine or dryer.
- Check straps periodically and re-tighten as needed.
- Make sure there are no loose strap ends that could become entangled with moving parts of the motorcycle. Check strap management periodically.
- Suggestion: Optional rain cover for use in wet weather conditions. When using, make sure it is pulled down and secure around the tank bag.


## INSTALLATION

1. Locate the mount straps and disassemble the long and short retention straps from them prior to continuing installation.


Note the length difference as shown in the parts list, and set aside.

2. Position the tank bag in the center on top of the tank as shown in the picture below.


TANK BAG

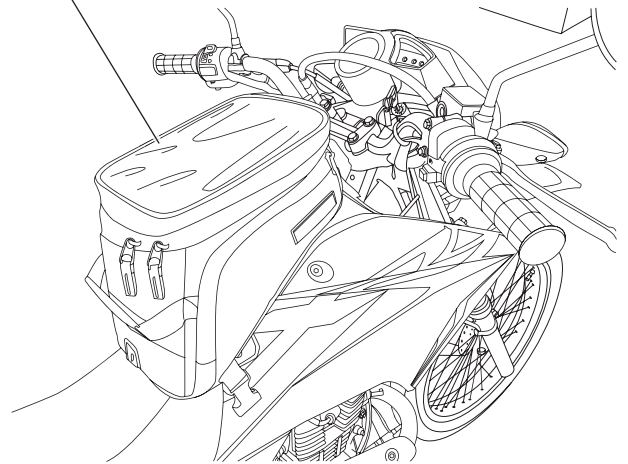


3. Install a rear mount strap to the right side by wrapping it around the upper "A" section of the vehicle frame and bringing the buckle end through the loop end. Leave the strap loose (tighten at a later step).

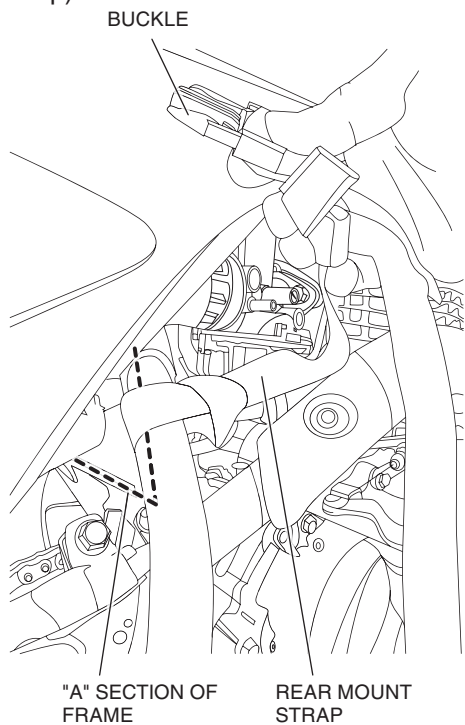


4. Repeat step 3 for the left side mount strap.

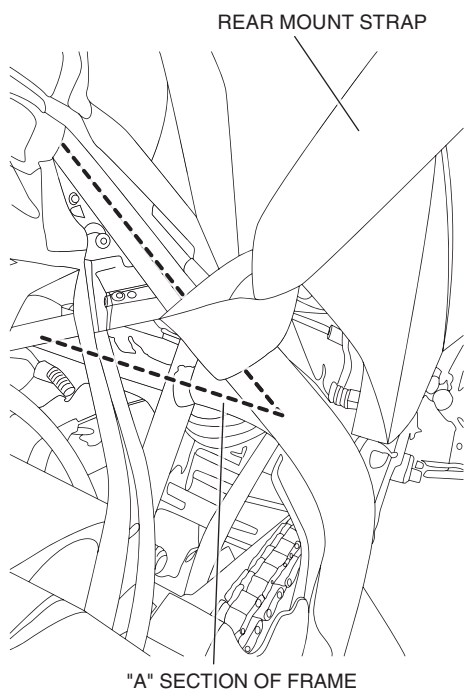

5. Attach the long retention strap to the end of the left side rear strap by stretching one of the loop ends over the buckle. Repeat this step for the right side so that both strap buckle ends are held and with the retention strap stretched across the front of the seat.

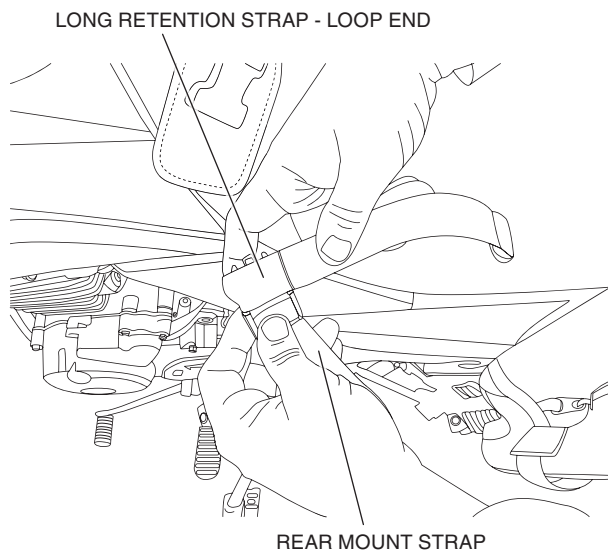


6. Insert both left and right rear strap buckles into their mating parts attached to the rear of the bag.

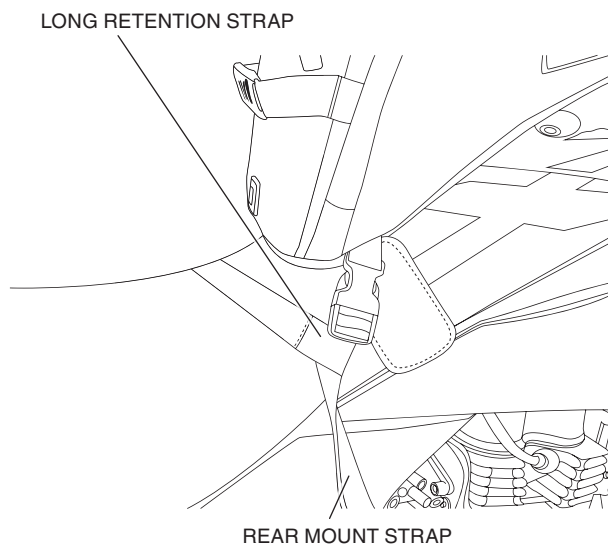


- Attach the short retention strap to the end of the right side front strap by stretching one of the loop ends over the buckle. Insert the front strap buckle into the mating part on the right side front of the bag. Route the free end of the front strap behind the throttle cable as shown in the picture below.





- Repeat Step 7 on the left side of the bike by routing the free buckle end of the front mount strap through the other loop end of the short retention strap. Insert the buckle end into the mating part on the front of the bag.
- Tighten down the bag by pulling down on the four strap ends at all four corners. Take care to maintain alignment of the tank bag over the center of the tank as in Step 2.

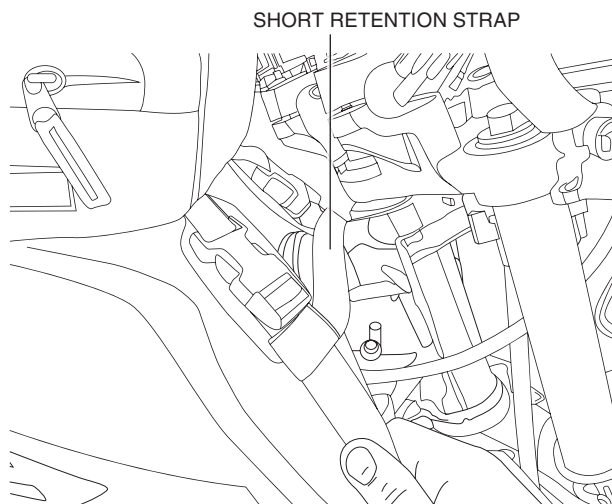

- Route the free end of the front mount strap under the steering head of the bike and up behind both the clutch cable and electric wiring harness. Make sure the strap stays in front of the steering stop rod.

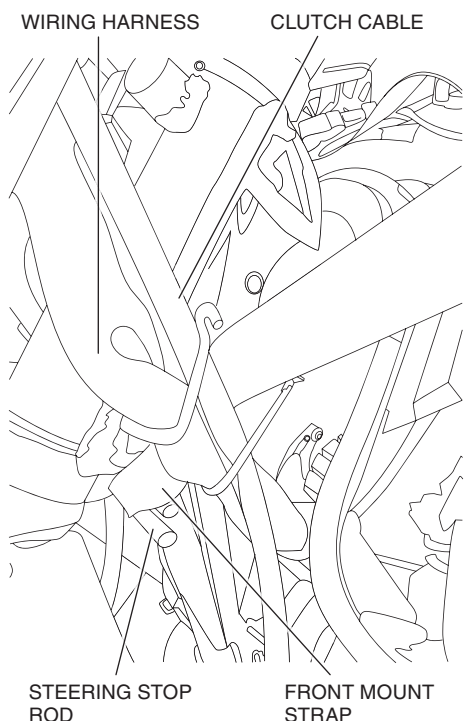

11. After the tank bag is in position and secure from shifting, roll up the extra strap length on each strap and secure the rolled strap using the velcro bands as shown in the picture below.

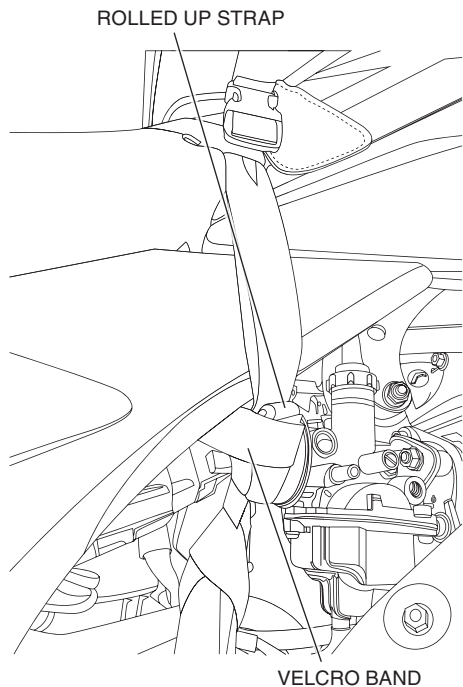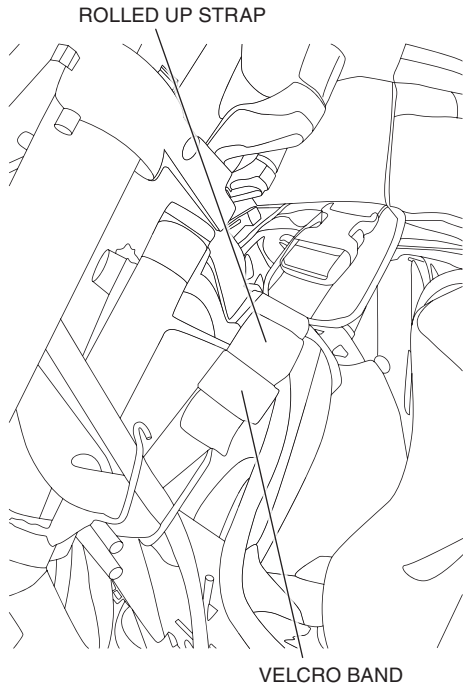

**NOTE: Before you ride, make sure all excess length of strap is well-secured and away from any moving parts.**

## INSTRUCTIONS FOR USE OF OPTIONAL VINYL FILM TEMPLATE



For added protection of motorcycle body surfaces, Honda offers sheets of vinyl film that can be purchased separately and cut to fit your bike using templates attached below.

The product below contains one sheet which is sufficient for the tank bag template, and can be ordered separately from American Honda.

### PROTECTOR SEAL 08P70-MGE-D20




1. Print out the template at the end of these instructions. Make sure the printed template size is correct by confirming the actual length measurement on the scale legend shown. Once size is confirmed correct, use a pair of scissors to cut out the paper template.
2. Place a sheet of the protector seal vinyl film on the table/work area with the shiny side up ("3M" logo facing down). Place the paper template on top of the vinyl film. Using a black marker, trace the paper template shape onto the vinyl film. Once complete, cut out the template shape on the vinyl film.

3. Before removing the backing, dry fit the vinyl film template onto the motorcycle cover by aligning as shown in the pictures below. It may be helpful to use small pieces of tape to hold the template in place while fine-tuning the intended alignment. Also note the narrow triangular cut-out in the template. This cut out accounts for curvature in the fuel tank and should be closed (edges touching) by the end of the installation process. When ready, remove the adhesive backing protection from the vinyl film and affix the vinyl film to the fuel tank.

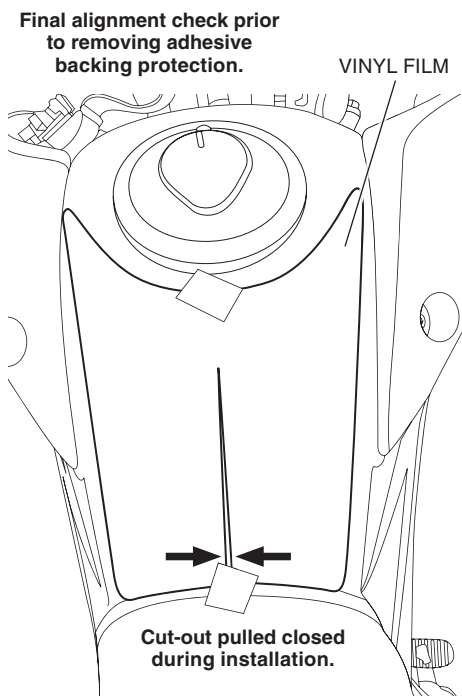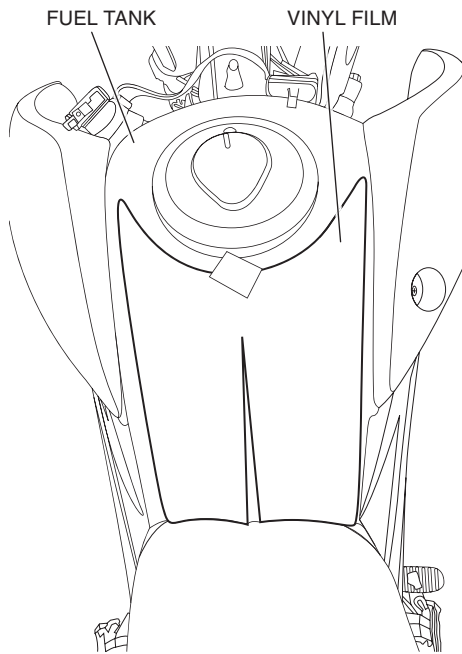

# TEMPLATE FOR OPTIONAL VINYL FILM

Print templates at 1:1 scale to ensure proper fit during installation.

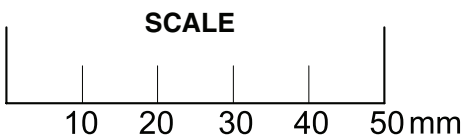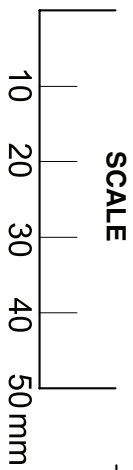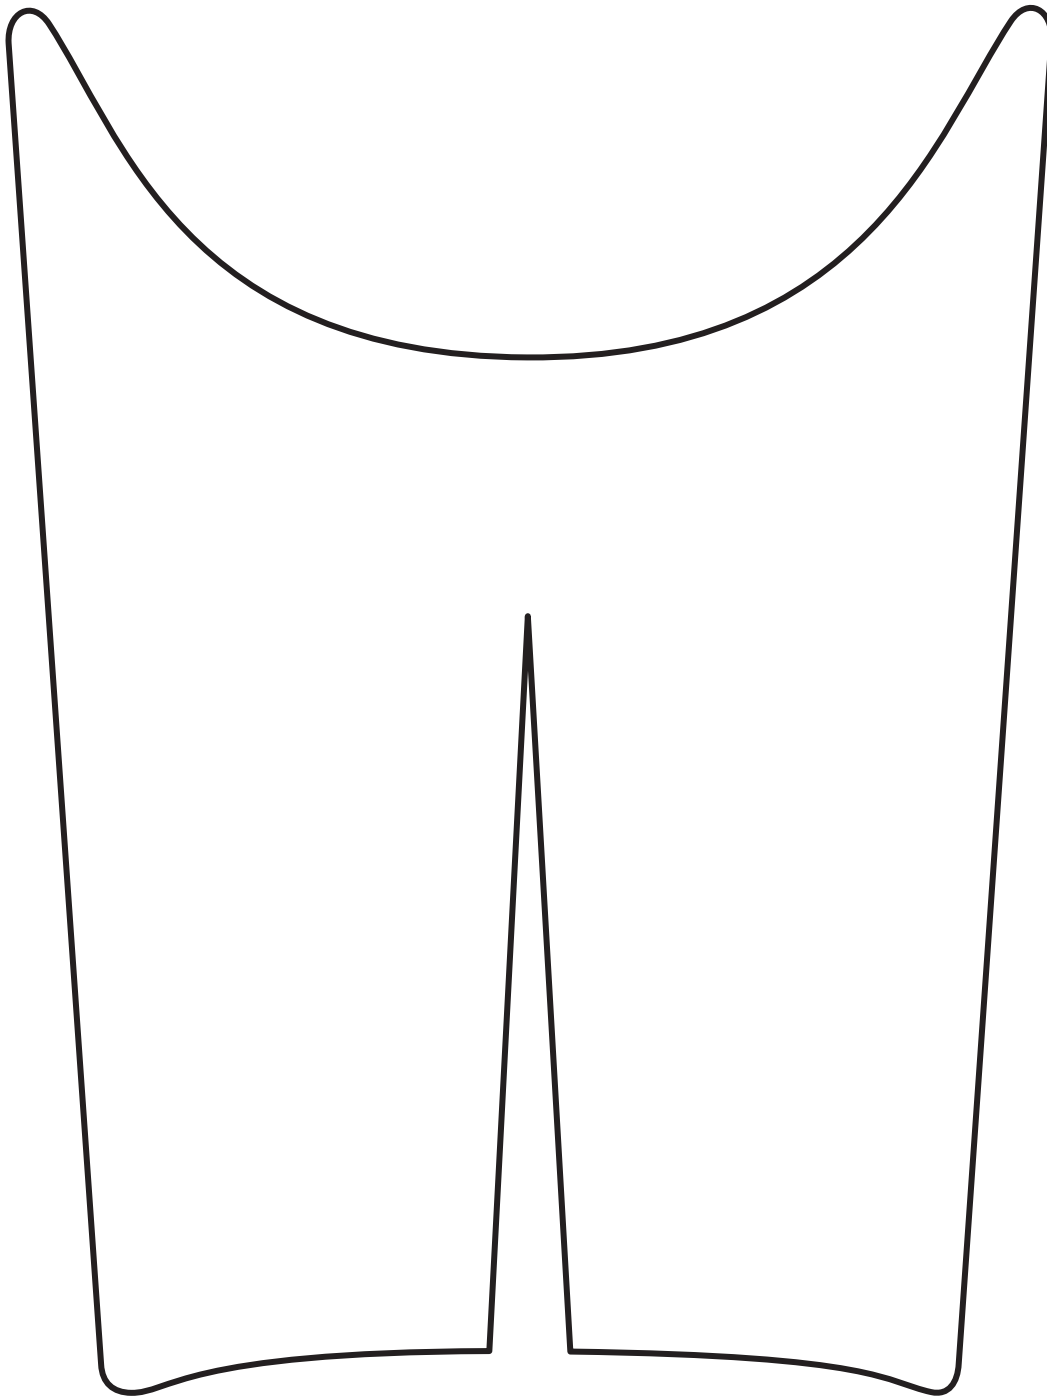

## NOTICE

If you print this template from your local computer, make sure the printer settings do not "scale" or "shrink" the page.