
WIND SCREEN

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
WIND SCREEN	08R70-K74-A00	NVA110B	2021.09	MII	1.0 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:







Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures. Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

⚠ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Save all removed parts unless otherwise indicated.

PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.


Component	No.	Parts Name	Qty	Parts No.
<p>The diagram shows an exploded view of the front cowl assembly. Part (1) is the screen stay, (2) and (3) are collars, (4) is the screen, (5) is a 5x20 mm screw, (6) is a 5 mm washer, (7) is a 5 mm nut, (8) is a 5x30 mm screw, (9) is a bar end cap, (10) is the front cowl stay, (11) is a spacer, (12) is a 6x25 mm bolt, (13) is a 5x35 mm screw, and (14) is a rubber sponge. The diagram shows how these parts fit together to attach the screen to the front cowl stay.</p>	(1)	Screen stay	1	-
	(2)	Collor	2	-
	(3)	Collor	2	-
	(4)	Screen	1	-
	(5)	5 x 20 mm screw	4	90109-MT3-000
	(6)	5 mm washer	4	90504-964-000
	(7)	5 mm nut	4	90111-MM9-000
	(8)	5 x 30 mm screw	2	93891-0503007
	(9)	Bar end cap	2	-
	(10)	Front cowl stay	1	-
	(11)	Spacer	2	-
	(12)	6 x 25 mm bolt	2	96001-0602500
	(13)	5 x 35 mm screw	2	93891-0503507
	(14)	Rubber sponge	2	-

TORQUE INFORMATION


Refer to the Service Manual for the torque values including standard torque of the removed parts. (M)

INSTALLATION


1. Refer to the Service Manual for the motorcycle, remove the motorcycle parts as shown.

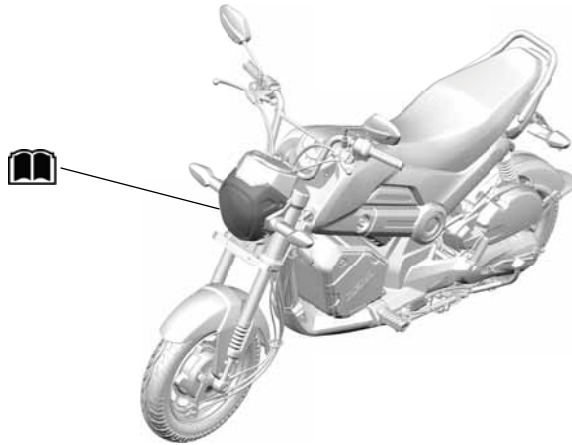


INSTALLATION IMAGE

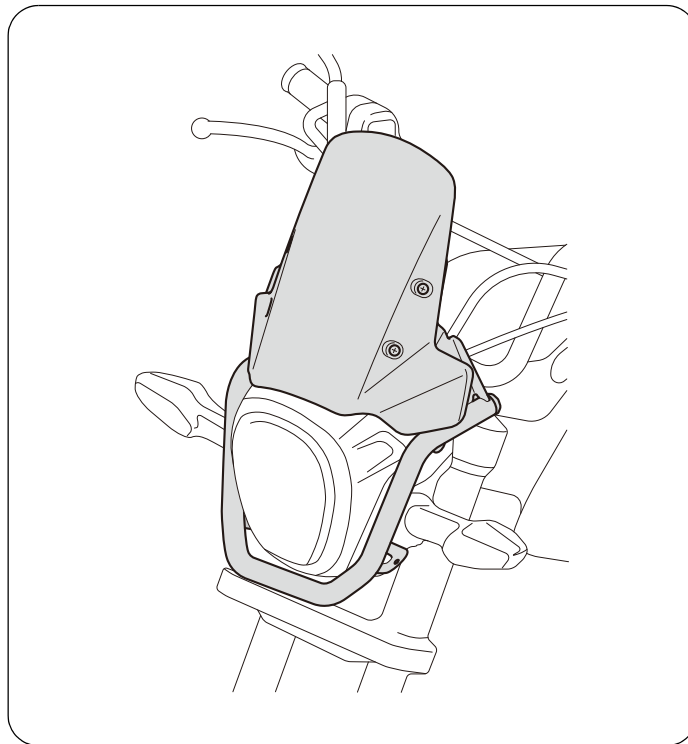


2. Remove as shown.

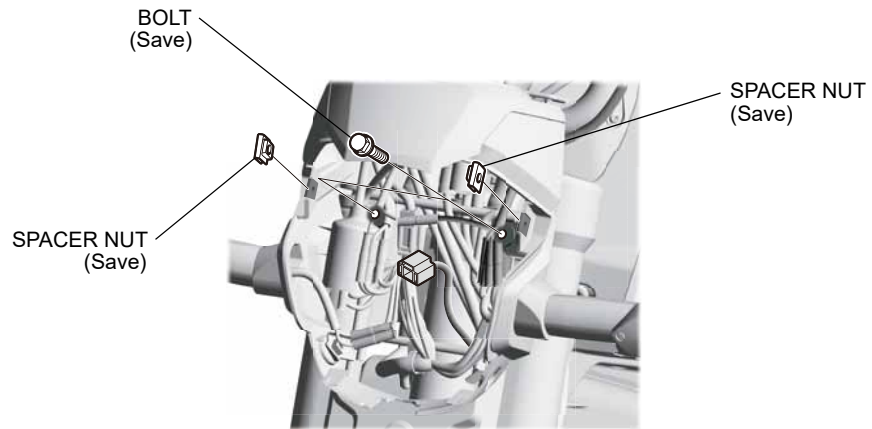


3. Install as shown.

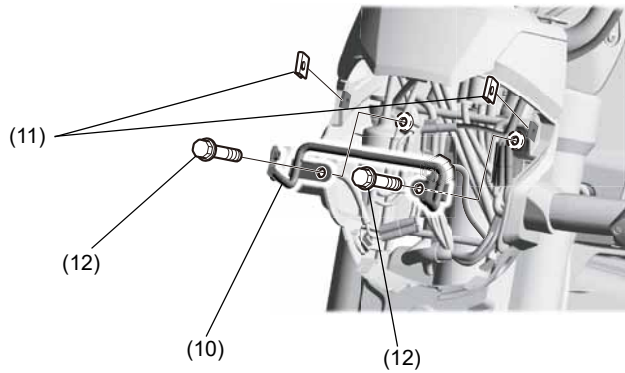

4. Refer to the Service Manual for the motorcycle, install the motorcycle parts as shown.
• Do not install screws.

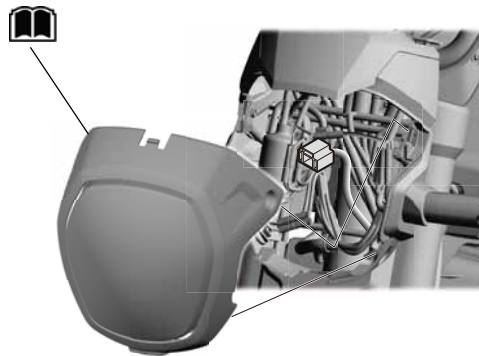

5. Install as shown.
• Repeat on the right side.

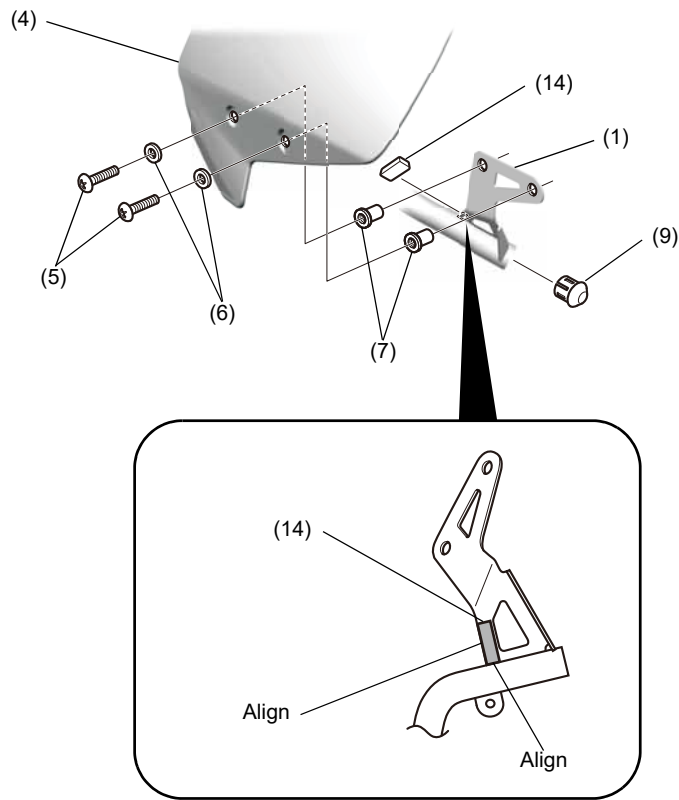

6. Install as shown.
• Repeat on the right side.

